

I04159

INSPECTION

1. Left side seat:

INSPECT POWER SEAT SWITCH CONTINUITY

Slide Switch:

Switch position	Tester connection	Specified condition
FRONT	1 - 9 4 - 6	Continuity
OFF	4 - 6 4 - 9	Continuity
BACK	1 - 6 4 - 9	Continuity

Front vertical switch:

Switch position	Tester connection	Specified condition
UP	1 - 10 4 - 5	Continuity
OFF	4 - 5 4 - 10	Continuity
DOWN	1 - 5 4 - 10	Continuity

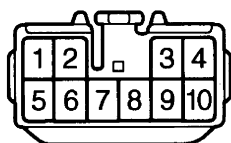
Lifter switch:

Switch position	Tester connection	Specified condition
UP	1 - 7 4 - 8	Continuity
OFF	4 - 7 4 - 8	Continuity
DOWN	1 - 8 4 - 7	Continuity

Reclining switch:

Switch position	Tester connection	Specified condition
FORWARD	1 - 3 2 - 4	Continuity
OFF	2 - 4 3 - 4	Continuity
REAR	1 - 2 3 - 4	Continuity

If continuity is not as specified, replace the switch.

Wire Harness Side

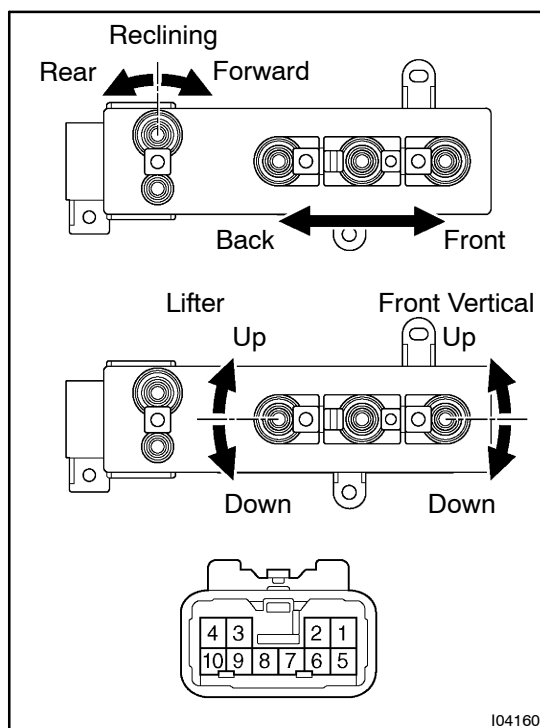
I05472

2. Left side seat:**INSPECT POWER SEAT SWITCH CIRCUIT**

- (a) Disconnect the switch connector and connect the seat wire harness to the floor wire harness.
- (b) Inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
4 – Ground	Constant	Continuity
1 – Ground	Constant	Battery voltage

If circuit is not as specified, inspect the circuits connected to other parts.



I04160

3. Right side seat:**INSPECT POWER SEAT SWITCH CONTINUITY****Slide switch:**

Switch position	Tester connection	Specified condition
FRONT	1 – 9 4 – 6	Continuity
OFF	4 – 6 4 – 9	Continuity
BACK	1 – 6 4 – 9	Continuity

Front vertical switch:

Switch position	Tester connection	Specified condition
UP	1 – 5 4 – 10	Continuity
OFF	4 – 5 4 – 10	Continuity
DOWN	1 – 10 4 – 5	Continuity

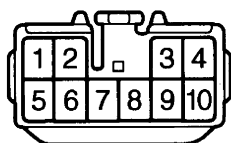
Lifter switch:

Switch position	Tester connection	Specified condition
UP	1 – 8 4 – 7	Continuity
OFF	4 – 7 4 – 8	Continuity
DOWN	1 – 7 4 – 8	Continuity

Reclining switch:

Switch position	Tester connection	Specified condition
FORWARD	1 – 3	Continuity
	2 – 4	
OFF	2 – 4	Continuity
	3 – 4	
REAR	1 – 2	Continuity
	3 – 4	

If continuity is not as specified, replace the switch.

Wire Harness Side

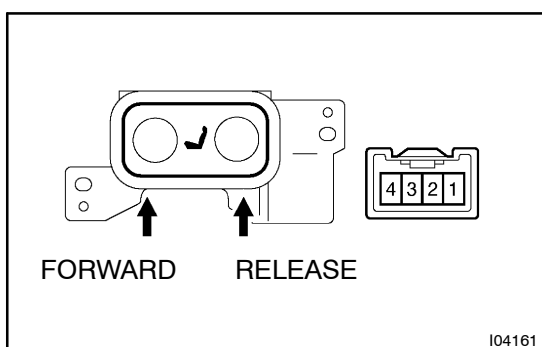
I05472

4. Right side seat:**INSPECT POWER SEAT SWITCH CIRCUIT**

- (a) Disconnect the switch connector and connect the seat wire harness to the floor wire harness.
- (b) Inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
4 – Ground	Constant	Continuity
1 – Ground	Constant	Battery voltage

If circuit is not as specified, inspect the circuits connected to other parts.

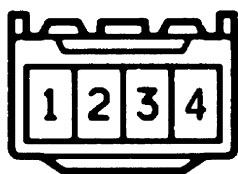


I04161

5. Left side seat:**INSPECT LUMBAR SUPPORT SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
FORWARD	1 – 4	Continuity
	2 – 3	
OFF	2 – 3	Continuity
	2 – 4	
RELEASE	1 – 3	Continuity
	2 – 4	

If continuity is not as specified, replace the switch.

Wire Harness Side

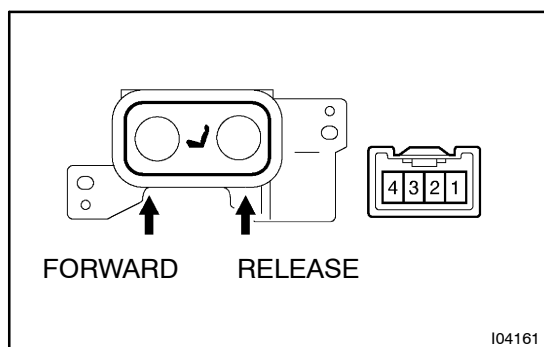
I04162

6. Left side seat:**INSPECT LUMBAR SUPPORT SWITCH CIRCUIT**

- (a) Disconnect the switch connector and connect the seat wire harness to the floor wire harness.
- (b) Inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
3 – Ground	Constant	Continuity
4 – Ground	Constant	Battery voltage

If circuit is not as specified, inspect the circuits connected to other parts.

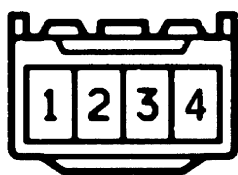


I04161

7. Right side seat:**INSPECT LUMBAR SUPPORT SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
FORWARD	1 – 4 2 – 3	Continuity
OFF	1 – 3 2 – 3	Continuity
RELEASE	1 – 3 2 – 4	Continuity

If continuity is not as specified, replace the switch.

Wire Harness Side

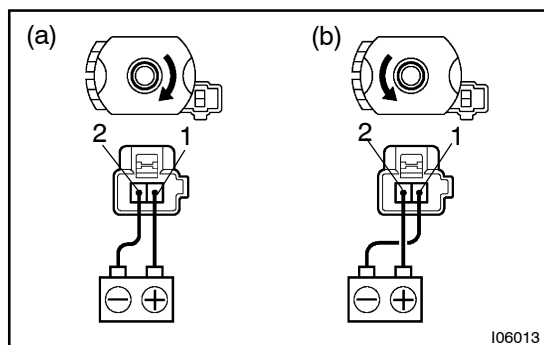
I04162

8. Right side seat:**INSPECT LUMBAR SUPPORT SWITCH CIRCUIT**

- (a) Disconnect the switch connector and connect the seat wire harness to the floor wire harness.
- (b) Inspect the connector on the wire harness side.

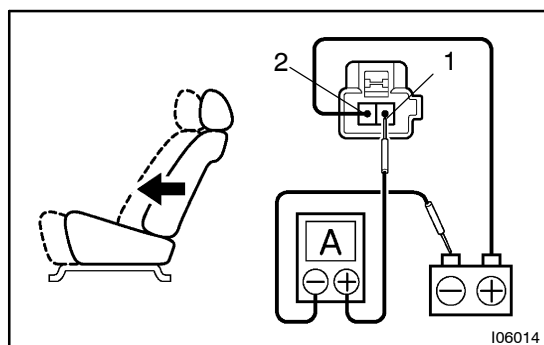
Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
1 – Ground	Constant	Battery voltage

If circuit is not as specified, inspect the circuits connected to other parts.

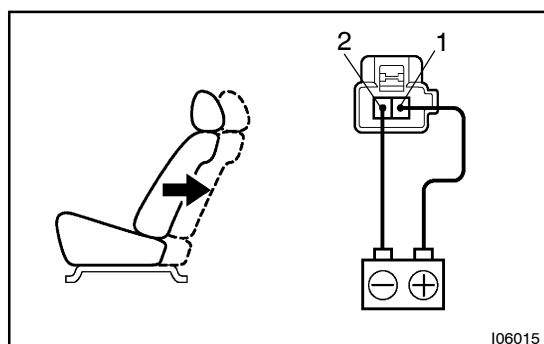
**9. INSPECT SLIDE MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the motor turns clockwise.
- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the seat adjuster.

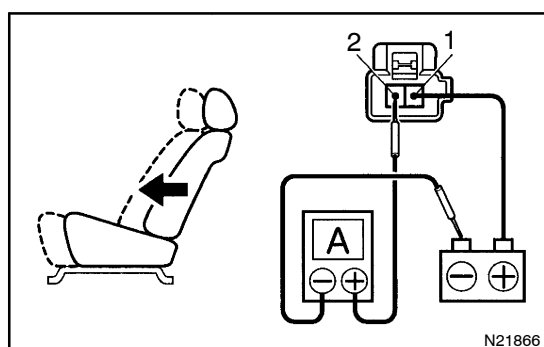
**10. Left side seat:****INSPECT SLIDE MOTOR PTC THERMISTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 2, the positive (+) lead from the ammeter to terminal 1 and the negative (-) lead to the battery negative (-) terminal, then move the seat cushion to the front position.
- (b) Continue to apply voltage, check that current changes to less than 1 ampere within 4 to 90 seconds.

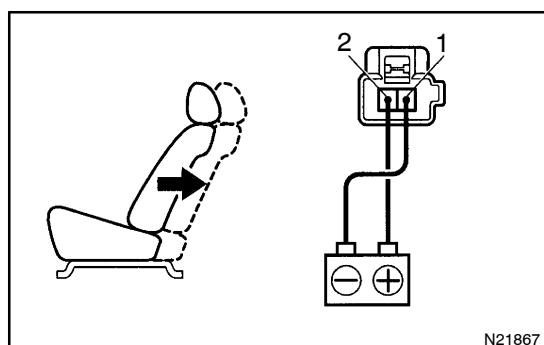


- (c) Disconnect the leads from terminals.
- (d) Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the seat cushion begins to move backwards.

If operation is not as specified, replace the seat adjuster.

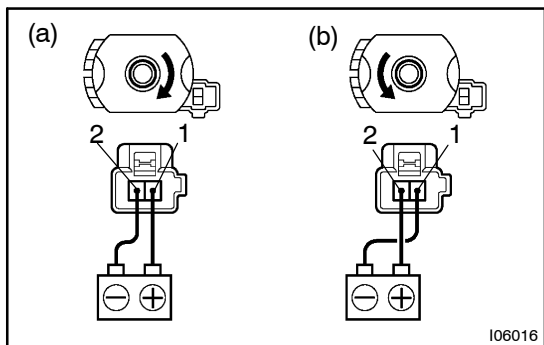
**11. Right side seat:****INSPECT SLIDE MOTOR PTC THERMISTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1, the positive (+) lead from the ammeter to terminal 2 and the negative (-) lead to the battery negative (-) terminal, then move the seat cushion to the front position.
- (b) Continue to apply voltage, check that current changes to less than 1 ampere within 4 to 90 seconds.



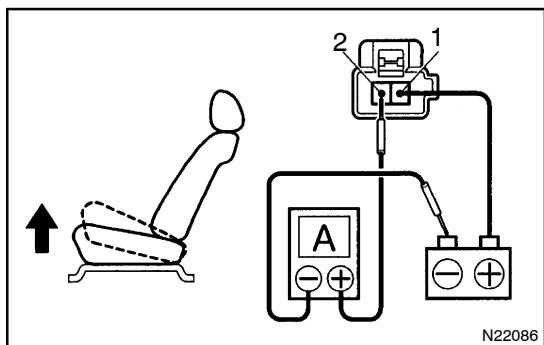
- (c) Disconnect the leads from terminals.
- (d) Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, check that the seat cushion begins to move backwards.

If operation is not as specified, replace the seat adjuster.

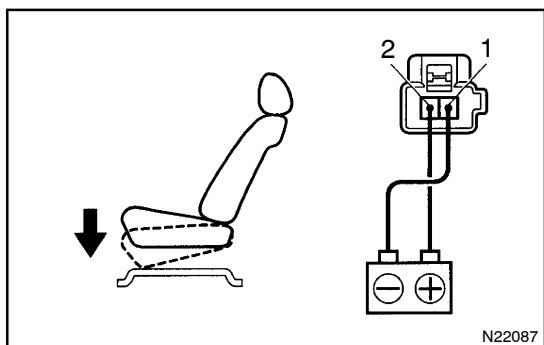
**12. INSPECT FRONT VERTICAL MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the motor turns clockwise.
- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the seat adjuster.

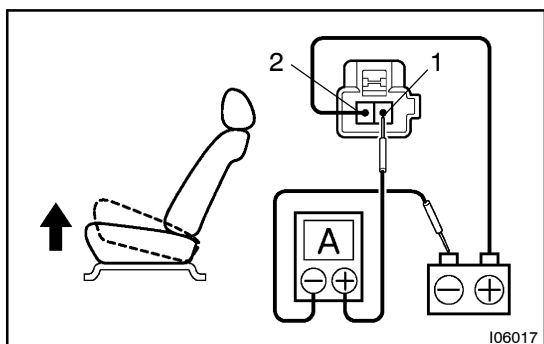
**13. Left side seat:****INSPECT FRONT VERTICAL MOTOR PTC THERMISTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1, the positive (+) lead from the ammeter to terminal 2 and the negative (-) lead to the battery negative (-) terminal, then move the seat cushion to the highest position.
- (b) Continue to apply voltage, check that the current changes to less than 1 ampere within 4 to 90 seconds.

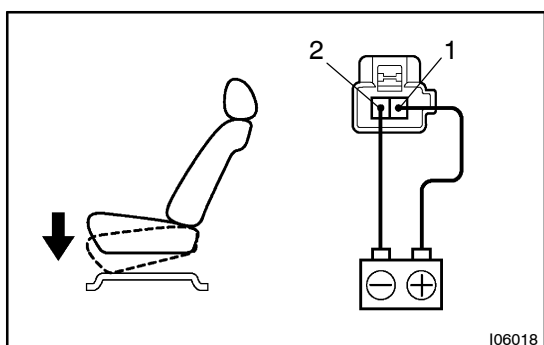


- (c) Disconnect the leads from the terminals.
- (d) Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, check that the seat cushion begins to descend.

If operation is not as specified, replace the seat adjuster.

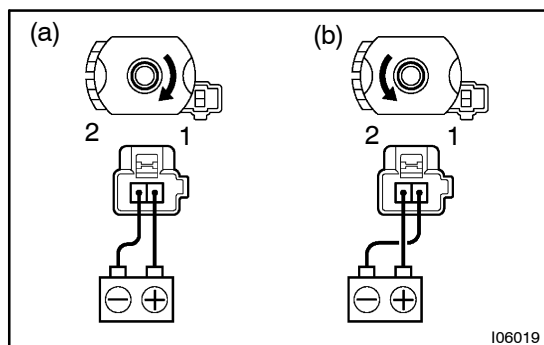
**14. Right side seat:****INSPECT FRONT VERTICAL MOTOR PTC THERMISTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 2, the positive (+) lead from the ammeter to terminal 1 and the negative (-) lead to the battery negative (-) terminal, then move the seat cushion to the highest position.
- (b) Continue to apply voltage, check that the current changes to less than 1 ampere within 4 to 90 seconds.



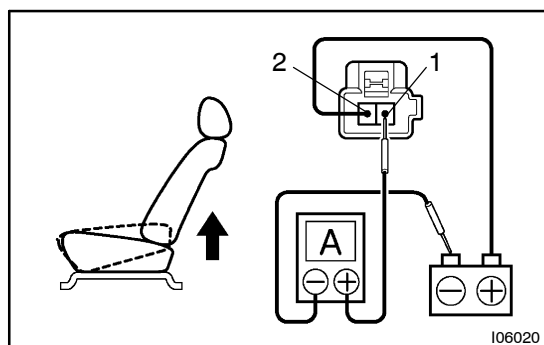
- (c) Disconnect the leads from the terminals.
- (d) Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the seat cushion begins to descend.

If operation is not as specified, replace the seat adjuster.

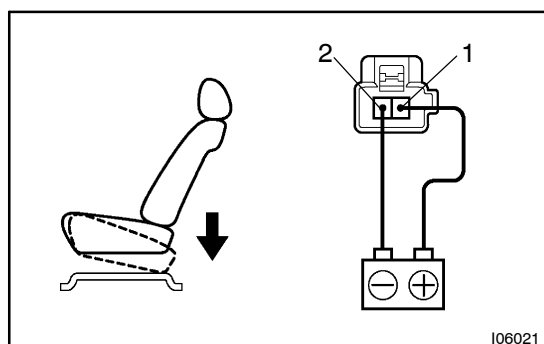
**15. INSPECT LIFTER MOTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the motor turns clockwise.
- Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the seat adjuster.

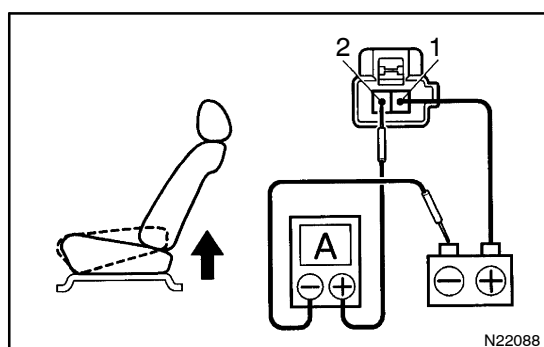
**16. Left side seat:****INSPECT LIFTER MOTOR PTC THERMISTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 2, the positive (+) lead from the ammeter to terminal 1 and the negative (-) lead to the battery negative (-) terminal, then move the seat cushion to the highest position.
- Continue to apply voltage, check that the current changes to less than 1 ampere within 4 to 90 seconds.

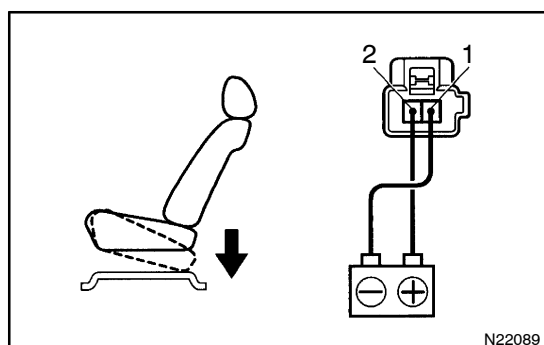


- Disconnect the leads from the terminals.
- Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the seat cushion begins to descend.

If operation is not as specified, replace the seat adjuster.

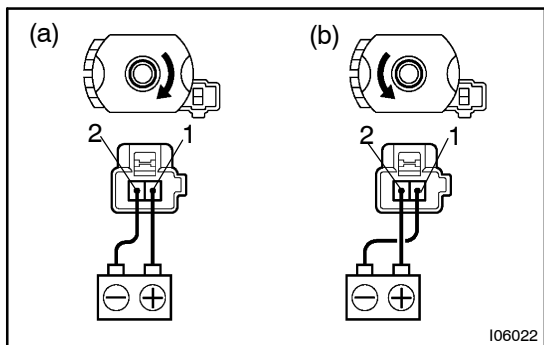
**17. Right side seat:****INSPECT LIFTER MOTOR PTC THERMISTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 1, the positive (+) lead from the ammeter to terminal 2 and the negative (-) lead to the battery negative (-) terminal, then move the seat cushion to the highest position.
- Continue to apply voltage, check that the current changes to less than 1 ampere within 4 to 90 seconds.



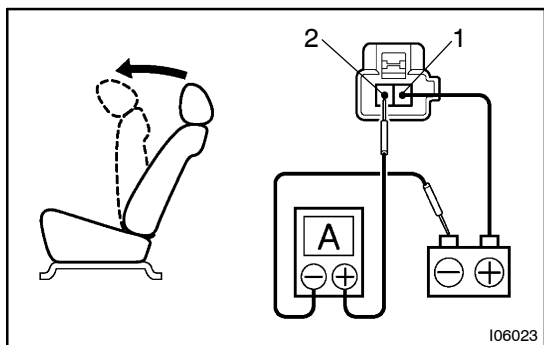
- Disconnect the leads from the terminals.
- Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, check that the seat cushion begins to descend.

If operation is not as specified, replace the seat adjuster.

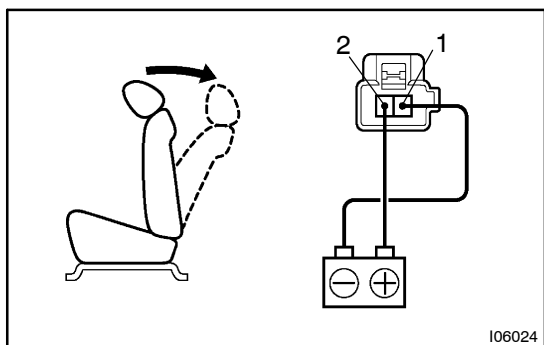
**18. INSPECT RECLINING MOTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the motor turns clockwise.
- Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the seat adjuster.

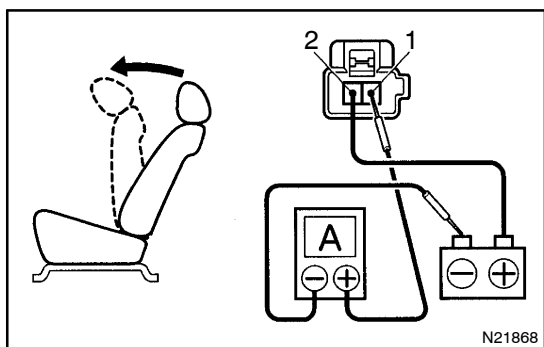
**19. Left side seat:****INSPECT RECLINING MOTOR PTC THERMISTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 1, the positive (+) lead from the ammeter to terminal 2 and the negative (-) lead to the battery negative (-) terminal, then recline the seat back to the most forward position.
- Continue to apply voltage, check that the current changes to less than 1 ampere within 4 to 90 seconds.

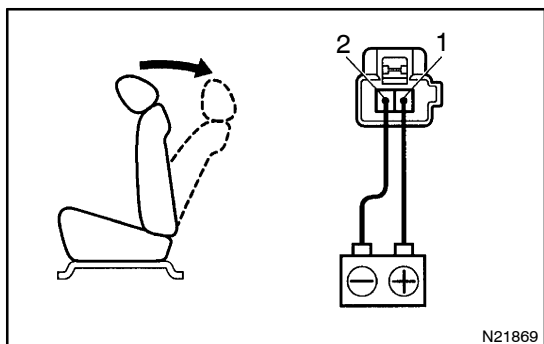


- Disconnect the leads from the terminals.
- Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, check that the seat back begins to fall backward.

If operation is not as specified, replace the seat adjuster.

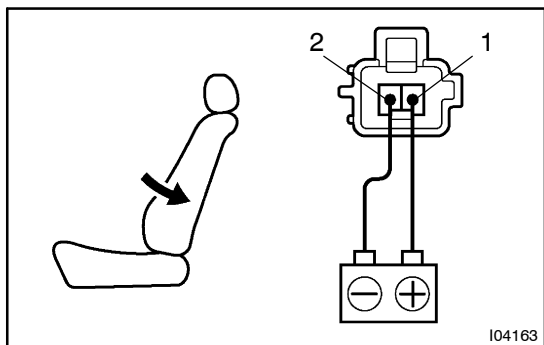
**20. Right side seat:****INSPECT RECLINING MOTOR PTC THERMISTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 2, the positive (+) lead from the ammeter to terminal 1 and the negative (-) lead to the battery negative (-) terminal, then recline the seat back to the most forward position.
- Continue to apply voltage, check that the current changes to less than 1 ampere within 4 to 90 seconds.

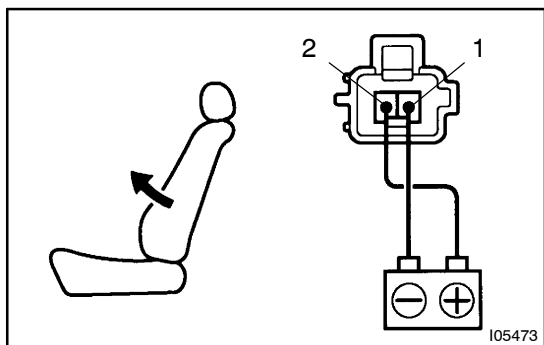


- Disconnect the leads from the terminals.
- Approximately 60 seconds later, connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the seat back begins to fall backward.

If operation is not as specified, replace the seat adjuster.

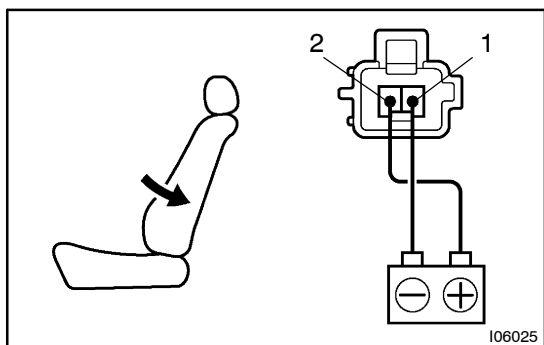
**21. Left side seat:****INSPECT LUMBAR SUPPORT MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the lumbar support moves to release side.

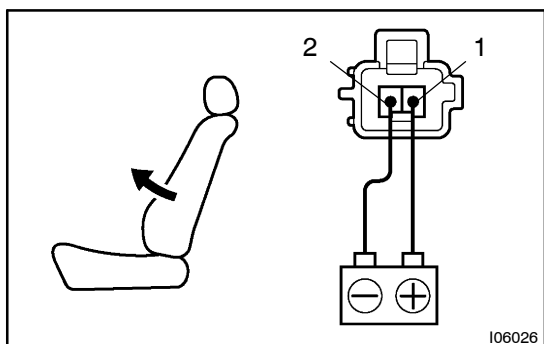


- (b) Reverse the polarity, check that the lumbar support moves forward.

If operation is not as specified, replace the seat adjuster.

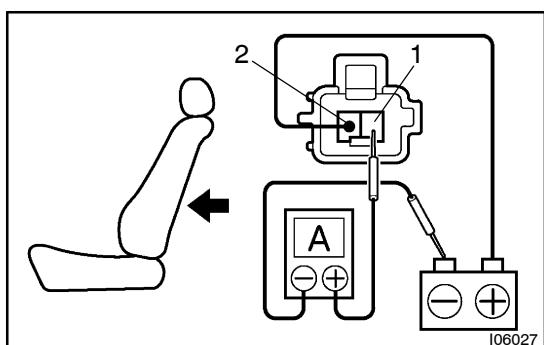
**22. Right side seat:****INSPECT LUMBAR SUPPORT MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, check that the lumbar support moves to release side.

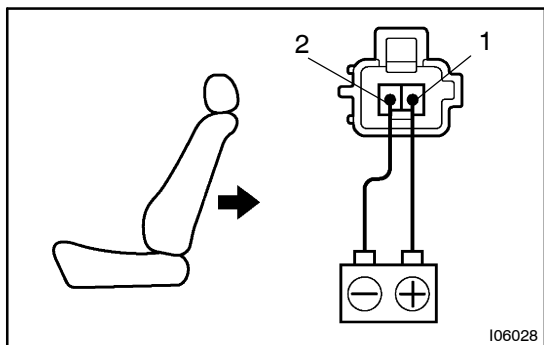


- (b) Reverse the polarity, check that the lumbar support moves forward.

If operation is not as specified, replace the seat adjuster.

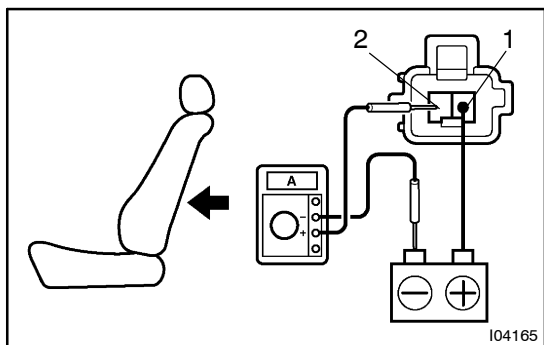
**23. Left side seat:****INSPECT LUMBAR SUPPORT MOTOR CIRCUIT BREAKER OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1 on the lumbar support motor connector and move the lumbar support to front end position.



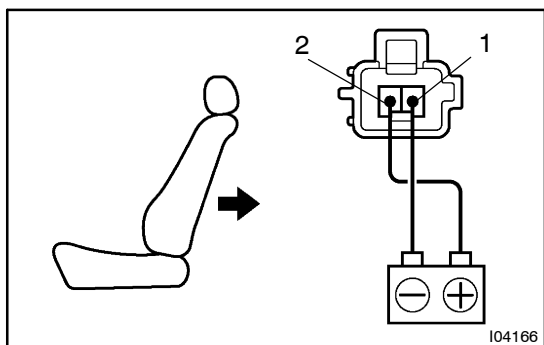
- (b) Continue to apply voltage, check that a circuit breaker operation noise can be heard within 4 to 60 seconds.
- (c) Reverse the polarity, check that the lumbar support begins to move release side with in spproximately 60 seconds.

If operation is not as specified, replace the motor.



24. Right side seat: INSPECT LUMBAR SUPPORT MOTOR CIRCUIT BREAKER OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2 on the lumbar support motor connector and move the lumbar support to front end position.



- (b) Continue to apply voltage, check that a circuit breaker operation noise can be heard within 4 to 60 seconds.
- (c) Reverse the polarity, check that the lumbar support begins to move release side with in spproximately 60 seconds.

If operation is not as specified, replace the motor.